

Instruction Manual



P/N 30-2207 GPS MODULE



STOP! - READ THIS BEFORE INSTALL OR USE!

WARNING:

THIS INSTALLATION MAY REQUIRE WELDING OR INTEGRATION INTO A VEHICLE'S ELECTRICAL SYSTEM. DAMAGE TO SENSITIVE ELECTRONICS, FIRE, OR EXPLOSION MAY OCCUR IF PROPER PRECAUTION IS NOT TAKEN. IF THERE IS ANY DOUBT, **DO NOT** ATTEMPT THE INSTALLATION AND CONSULT A PROFESSIONAL.

NOTE: IT IS THE RESPONSIBILITY OF THE ENGINE TUNER TO ULTIMATELY CONFIRM THE CALIBRATION USE FOR ANY PARTICULAR ENGINE IS SAFE FOR ITS INTENDED USE. AEM HOLDS NO RESPONSIBILITY FOR ANY ENGINE DAMAGE THAT RESULTS FROM THE MISUSE OF THIS PRODUCT.


The AEM GPS Module features a 5Hz GPS/GLONASS receiver, external antenna, and AEMnet/CAN 2.0 output in a weather resistant enclosure. The GPS Module is ideal for generating track maps when used in concert with an AEM ECU and AEMData analysis software.

Features

- 5Hz GPS/GLONASS GPS receiver
- Latitude, Longitude, Speed, Altitude, Course, Satellite Count, UTC Time, UTC Date
- External magnetic antenna
- Supports vehicle/system voltages up to 16V
- Low-profile, weather resistant enclosure
- AEMnet (CAN bus) Output

PN	Description
35-2207	MODULE, GPS
10-2207	INST, GPS MODULE
1-3079	ANTENNA, GPS/GNSS
4-4065	VELCRO, 1.25" (2)

Installation

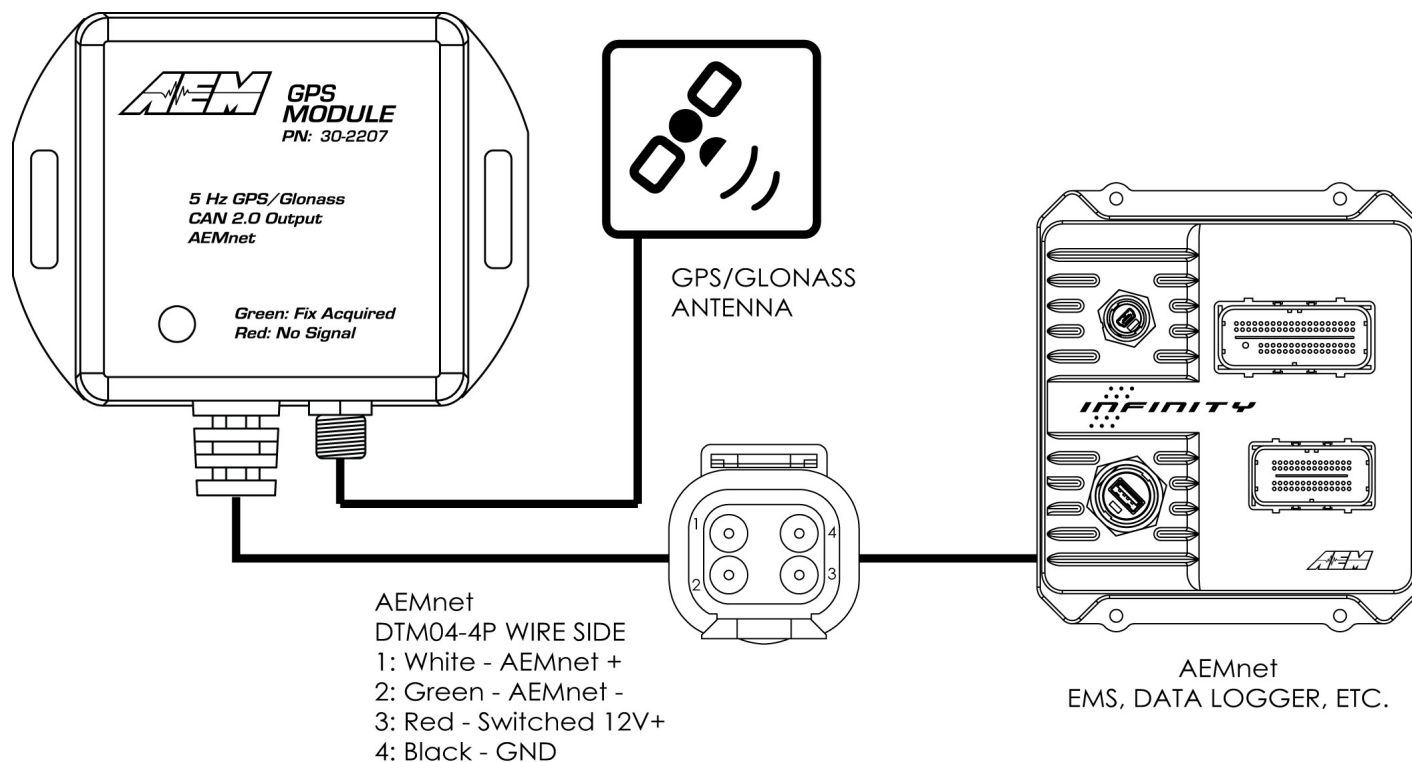

The GPS Module is equipped with an AEMnet connector (power, ground, and CAN) so that it is a true plug and play experience when used with other AEMnet products such as the Infinity ECU and CD series of dash displays.

Ideally, the GPS Module should be installed inside the vehicle in an area away from extreme temperatures or moisture. The module should be mounted using the provided "hook-and-loop" material or may be more rigidly mounted using fasteners through the module's mounting ears. Take care to avoid over-torquing mounting fasteners, if used.

The antenna should be mounted in a location where the top is pointed towards, and has a clear view of, the sky. The bottom of the antenna is magnetic or additional hook-and-loop material is provided for mounting; the dashboard or rear package shelf are **not** acceptable locations. The antenna should be mounted as high as possible in the center of a metal roof away from other antennas or structures. If the roof of the vehicle is non-metallic then a flat piece of metal at least five inches in diameter, to function as a ground plane, should be fabricated upon which the antenna should be placed.

Status LED

There is a status LED located on the top of the GPS Module that gives an indication of its operating status, specifically the quality of the current GPS signal:

LED	Description
OFF	The device is not powered
FLASHING RED	No valid GPS fix
RED	Valid fix, zero satellites in view
FLASHING GREEN	Less than 4 satellites in view
GREEN	4 or greater satellites in view
OTHER	Please contact AEM Support

Channels / Data

GPS

The GPS Module utilizes an internal 5Hz GPS/GLONASS receiver with a matching external active antenna. Faster time to fix, and better global coverage is afforded by the support of both the GPS and GLONASS constellations. The module is designed with an internal super capacitor that will retain the last known satellite position (ephemeris) while power is disconnected from the unit for up to 2.5 hours. This will allow for a very fast time to fix (<1 sec typ) once the device is turned on again; if power is removed for greater than the 2.5 hours then the time to fix will increase. The capacitor is automatically recharged and never needs to be replaced such as is the case with a more traditional battery.

The following GPS channels are output on AEMnet for logging on your Infinity ECU or other device:

Channel Name	Notes
GPS Latitude [deg]	+ = North, - = South
GPS Longitude [deg]	+ = East, - = West
GPS Speed [mph]	Speed
GPS Altitude [ft]	Above Mean Sea Level (MSL)
GPS Course [deg]	Course over ground, NOT heading
GPS Satellite Count	"Visible" number of satellites
GPS Valid	1 = Valid Fix, 0 = No Fix
GPS Year	UTC Time
GPS Month	UTC Time
GPS Day	UTC Time
GPS Hours	UTC Time
GPS Minutes	UTC Time
GPS Seconds	UTC Time

AEMnet (CAN Bus) Output

WHITE WIRE WITH BLACK STRIPE = AEMnet+ / CANH

GREEN WIRE WITH BLACK STRIPE = AEMnet- / CANL

The AEMnet output is suitable for output to AEM devices such as the CD Dash, AQ-1 data logger, or Infinity ECU. The following CAN configuration and message definition information is provided below to facilitate interface with third-party devices.

Bus Termination

All AEMnet/CAN networks must be terminated to have an equivalent of approximately 60 Ohms of resistance. Generally, this means a 120 Ohm resistor connected in parallel to AEMnet+/AEMnet- (or CANH/CANL) at both physical ends of the bus run. The unit does not have any internal termination and is intended to be connected to a pre-existing, properly terminated network. Please refer to the Bosch CAN2.0B specification for further detail.

bit rate	500	kb/sec
format	29	bit ID
transmit rate	100	hz
terminating resistor	none	
endianness	big / Motorola	
DLC	8	

0x0000A000 at 10hz

Byte	Label	Data Type	Scaling	Offset	Range
0	GPS Latitude	32 bit float	Degrees	0	+90.00 (north) to -90.00 (south) Degrees
1					
2					
3					
4	GPS Longitude	32 bit float	Degrees	0	+180.00 (east) to -180.00 (west) Degrees
5					
6					
7					

0x0000A001 at 10hz

Byte	Label	Data Type	Scaling	Offset	Range
0	GPS Speed	16 bit unsigned	0.01 mph/bit	0	0 to 655.35 MPH
1					
2	GPS Altitude	16 bit signed	1 ft/bit	0	-32,768 to 32,767 Feet
3					
4	GPS True Course	16 bit unsigned	0.01 deg/bit	0	0 to 655.35 degrees
5					
6	GPS Satellites in Use	8 bit unsigned	1	0	0 to 255 Satellites
7	GPS Valid	8 bit unsigned	0 = N/G, 1 = OK	0	0 to 255

0x0000A002 at 5hz

Byte	Label	Data Type	Scaling	Offset	Range
0	GPS Valid	8 bit unsigned	0 = N/G, 1 = OK	0	0 to 255
1	UTC Date Year	8 bit unsigned	1	0	0 to 255 Years
2	UTC Date Month	8 bit unsigned	1	0	0 to 255 Months
3	UTC Date Day	8 bit unsigned	1	0	0 to 255 Days
4	-	-	-	-	-
5	UTC Time Hours	8 bit unsigned	1	0	0 to 255 Hours
6	UTC Time Minutes	8 bit unsigned	1	0	0 to 255 Minutes
7	UTC Time Seconds	8 bit unsigned	1	0	0 to 255 Seconds

12 Month Limited Warranty

Advanced Engine Management Inc. warrants to the consumer that all AEM High Performance products will be free from defects in material and workmanship for a period of twelve (12) months from date of the original purchase. Products that fail within this 12-month warranty period will be repaired or replaced at AEM's option, when determined by AEM that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of the AEM part. In no event shall this warranty exceed the original purchase price of the AEM part nor shall AEM be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12-month warranty period. Improper use or installation, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM. Warranty returns will only be accepted by AEM when accompanied by a valid Return Merchandise Authorization (RMA) number. Product must be received by AEM within 30 days of the date the RMA is issued.

UEGO oxygen sensors are considered wear items and are not covered under warranty.

Please note that before AEM can issue an RMA for any electronic product, it is first necessary for the installer or end user to contact the EMS tech line at 1-800-423-0046 to discuss the problem. Most issues can be resolved over the phone. Under no circumstances should a system be returned or a RMA requested before the above process transpires.

AEM will not be responsible for electronic products that are installed incorrectly, installed in a non-approved application, misused, or tampered with.

Any AEM electronics product can be returned for repair if it is out of the warranty period. There is a minimum charge of \$50.00 for inspection and diagnosis of AEM electronic parts. Parts used in the repair of AEM electronic components will be extra. AEM will provide an estimate of repairs and receive written or electronic authorization before repairs are made to the product.

Specifications

Dimensions	width	2.6 / 66	in / mm
	length (incl coax)	2.3 / 58	in / mm
	height	0.8 / 21	in / mm
Supply Voltage	min	7	VDC
	max	18	VDC
Supply Current (13.8V)	nominal	175.0	mA
Operating Temperature	min	-4 / -20	degF / degC
	max (16V Supply)	185 / 85	degF / degC
CAN 2.0B Output	bit rate	500	kb/sec
	format	29	bit ID
	terminating resistor	none	
	endianness	big / Motorola	
	DLC	8	
GPS	Channels	52, parallel tracking	
	Correlators	~ 400,000	
	Frequency (GPS)	(L1) 1,575	MHz
	Frequency (GNSS)	(FDML1) 1,602	MHz
	Tracking Sensitivity	-165	dBm
	Horizontal Position Accuracy	< 2.5 m CEP (SA off)	
	<i>Time To First Fix - TTFF*</i>		
	Obscuration recovery	0.1	sec
	Hot start [^]	< 1	sec
	Warm	< 30	sec
	Cold	< 35	sec
Notes	* = theoretical minimum values; values in real world may differ		
	[^] = Hot start battery backup lasts 2.5hr w/o 12V supply		