

# MSD<sup>®</sup> IGNITION INSTALLATION INSTRUCTIONS

## MSD APS Starter Pinion Assembly PN 5089

### Parts Included:

1 - Pinion Assembly

1 - Grease Pack

The pinion assembly of the APS starter is a slight press-fit into the mounting block. To replace it, it is recommended to heat the mounting block to install the new pinion assembly.

1. Remove the three bolts that hold the mounting block to the starter.
2. Pull the mounting block and pinion assembly out of the starter housing.
3. Gently tap the drive gear with a hammer to remove it from the mounting block (Figure 1).
4. To install the new pinion assembly, heat the mounting block at 250° for 15-minutes.
5. Apply the supplied grease to the internal gear and the mount of the pinion and install it to the mounting block. There is a slight press-fit, but the heating of the housing should be enough for the pinion to slide in easily. If needed, use a small press to install the pinion (Figure 2).
6. Install the mounting block and pinion assembly into the starter housing and install the three bolts.



Figure 1 Removing the Pinion Assembly.

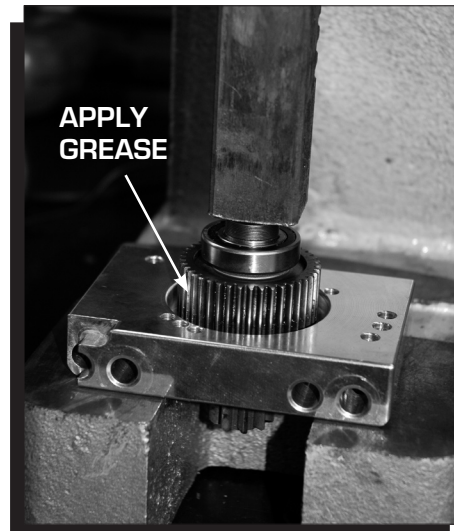


Figure 2 Installing the Pinion Assembly.

### Limited Warranty

MSD IGNITION warrants this product to be free from defects in material and workmanship under its intended normal use\*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD Ignition. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD Ignition. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD Ignition or its suppliers be liable for special or consequential damages.

\*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.